

Fig. 1

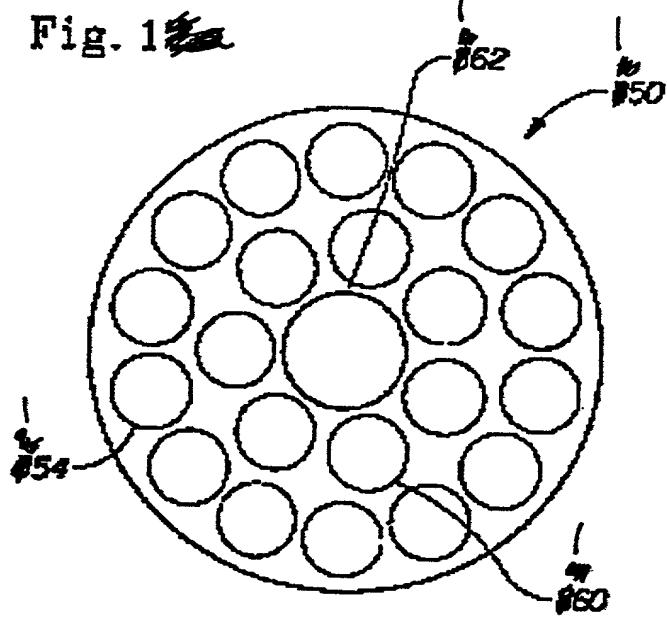


Fig. 2

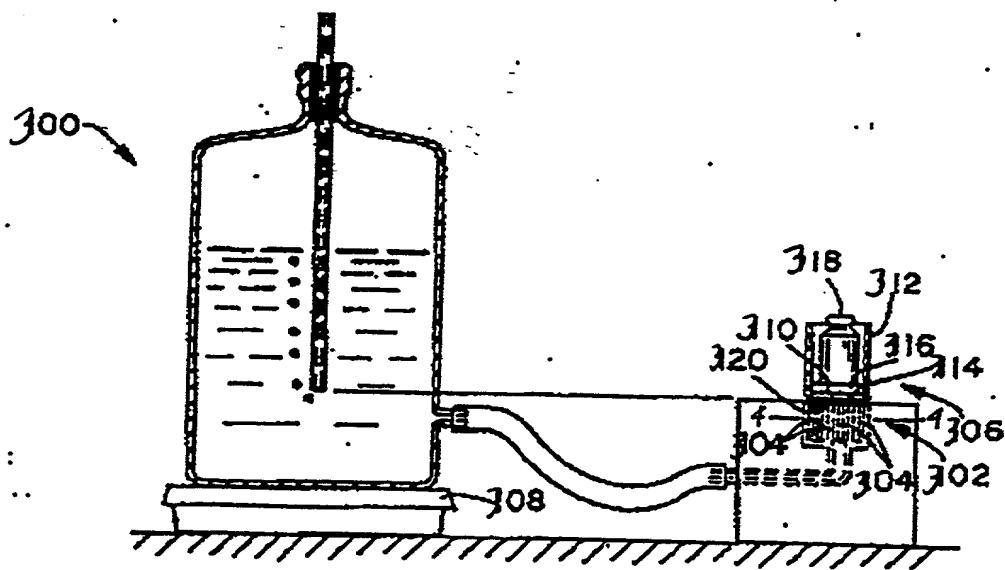


Fig. 3




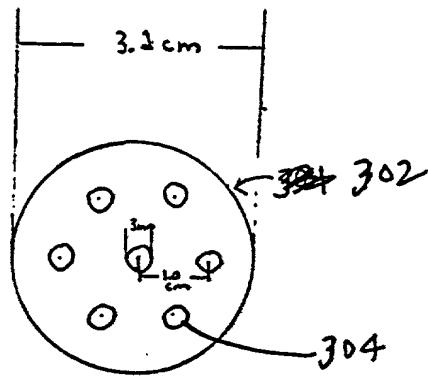


Fig. 4

Designer \_\_\_\_\_ Drwg. Ref. \_\_\_\_\_ Sheet No. \_\_\_\_\_  
Job Name \_\_\_\_\_ Date \_\_\_\_\_

~~Composite Permeability~~

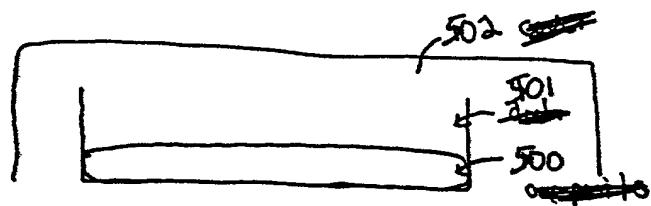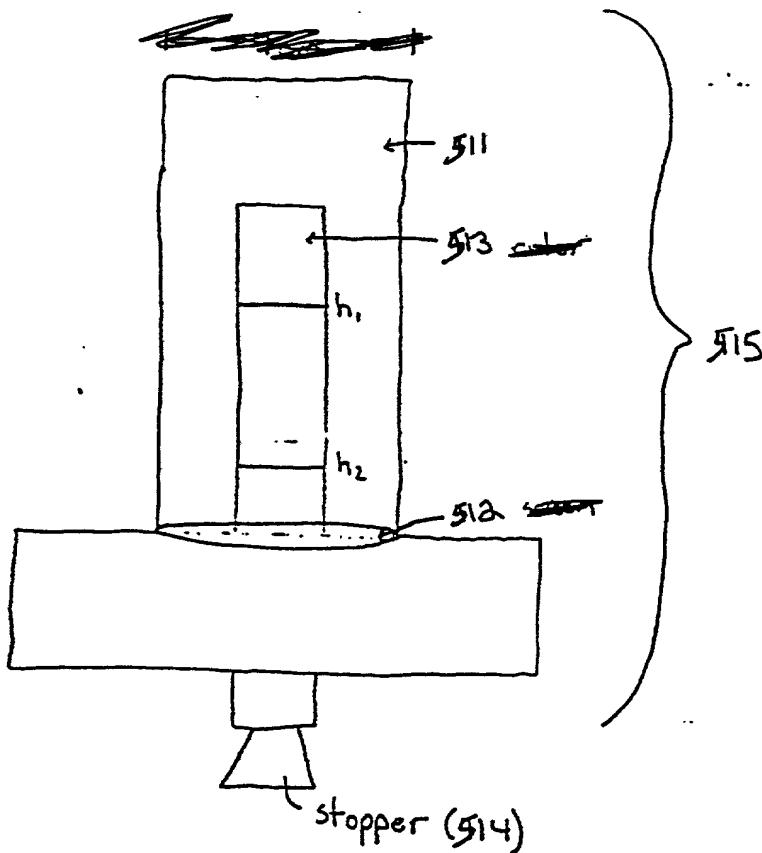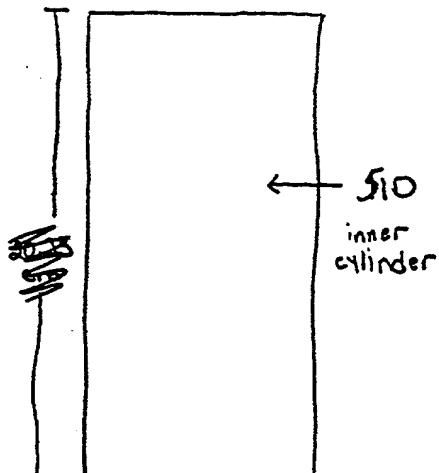

0900512-070601

KCBARRA

1 FIFE

Sheet No. \_\_\_\_\_

Designer \_\_\_\_\_ Drwg. Ref. \_\_\_\_\_ Date \_\_\_\_\_

Job Name \_\_\_\_\_

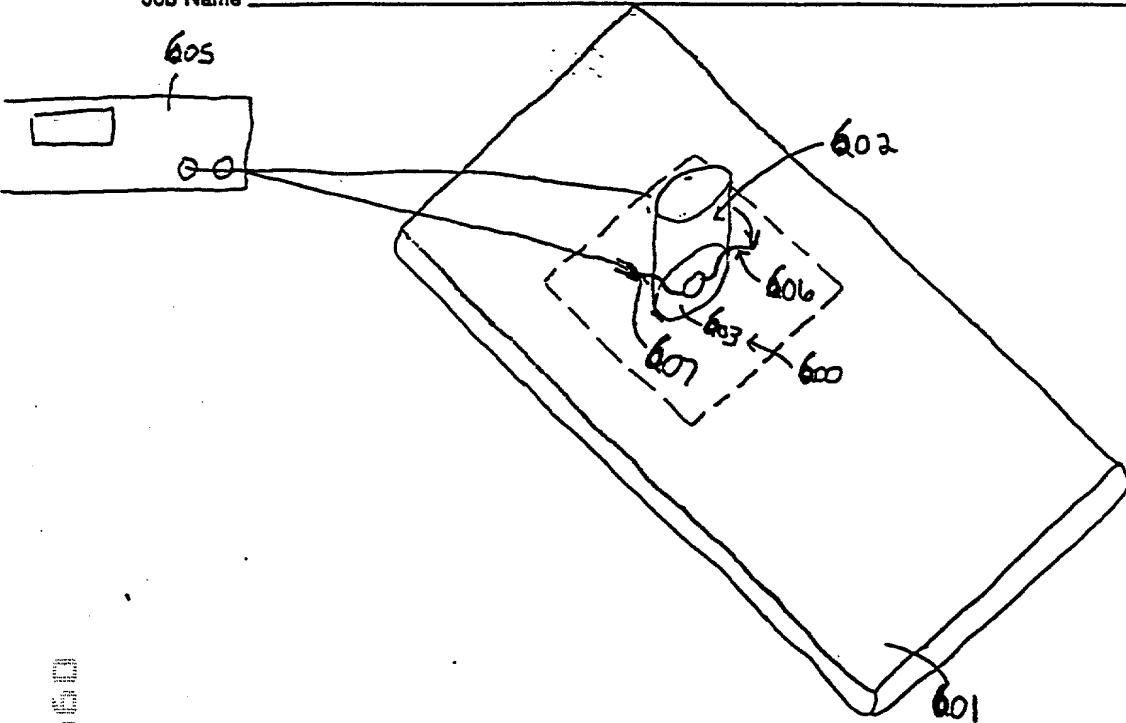


Fig. 6

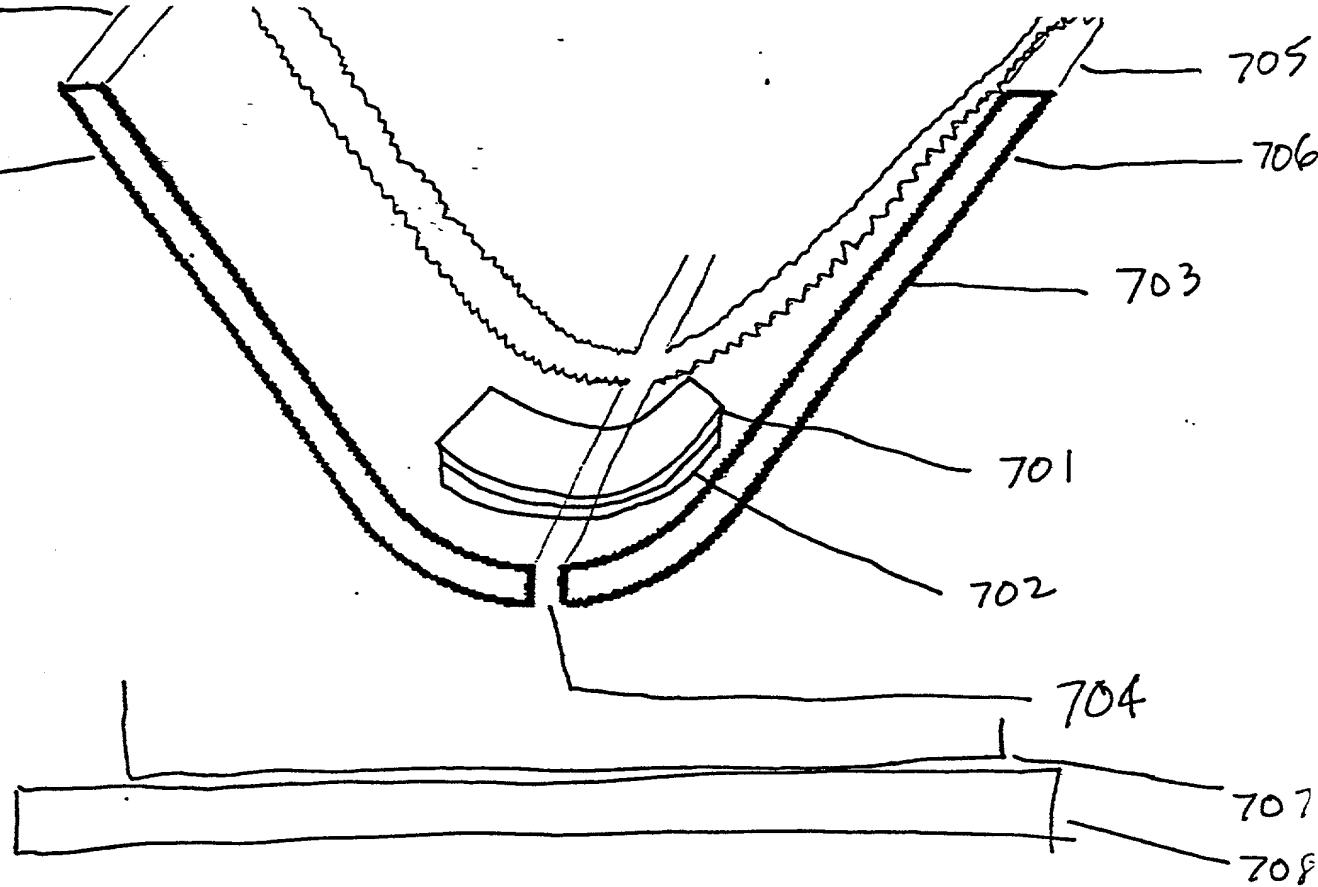


Fig. 7

## Composite Permeability vs Intake Rate space

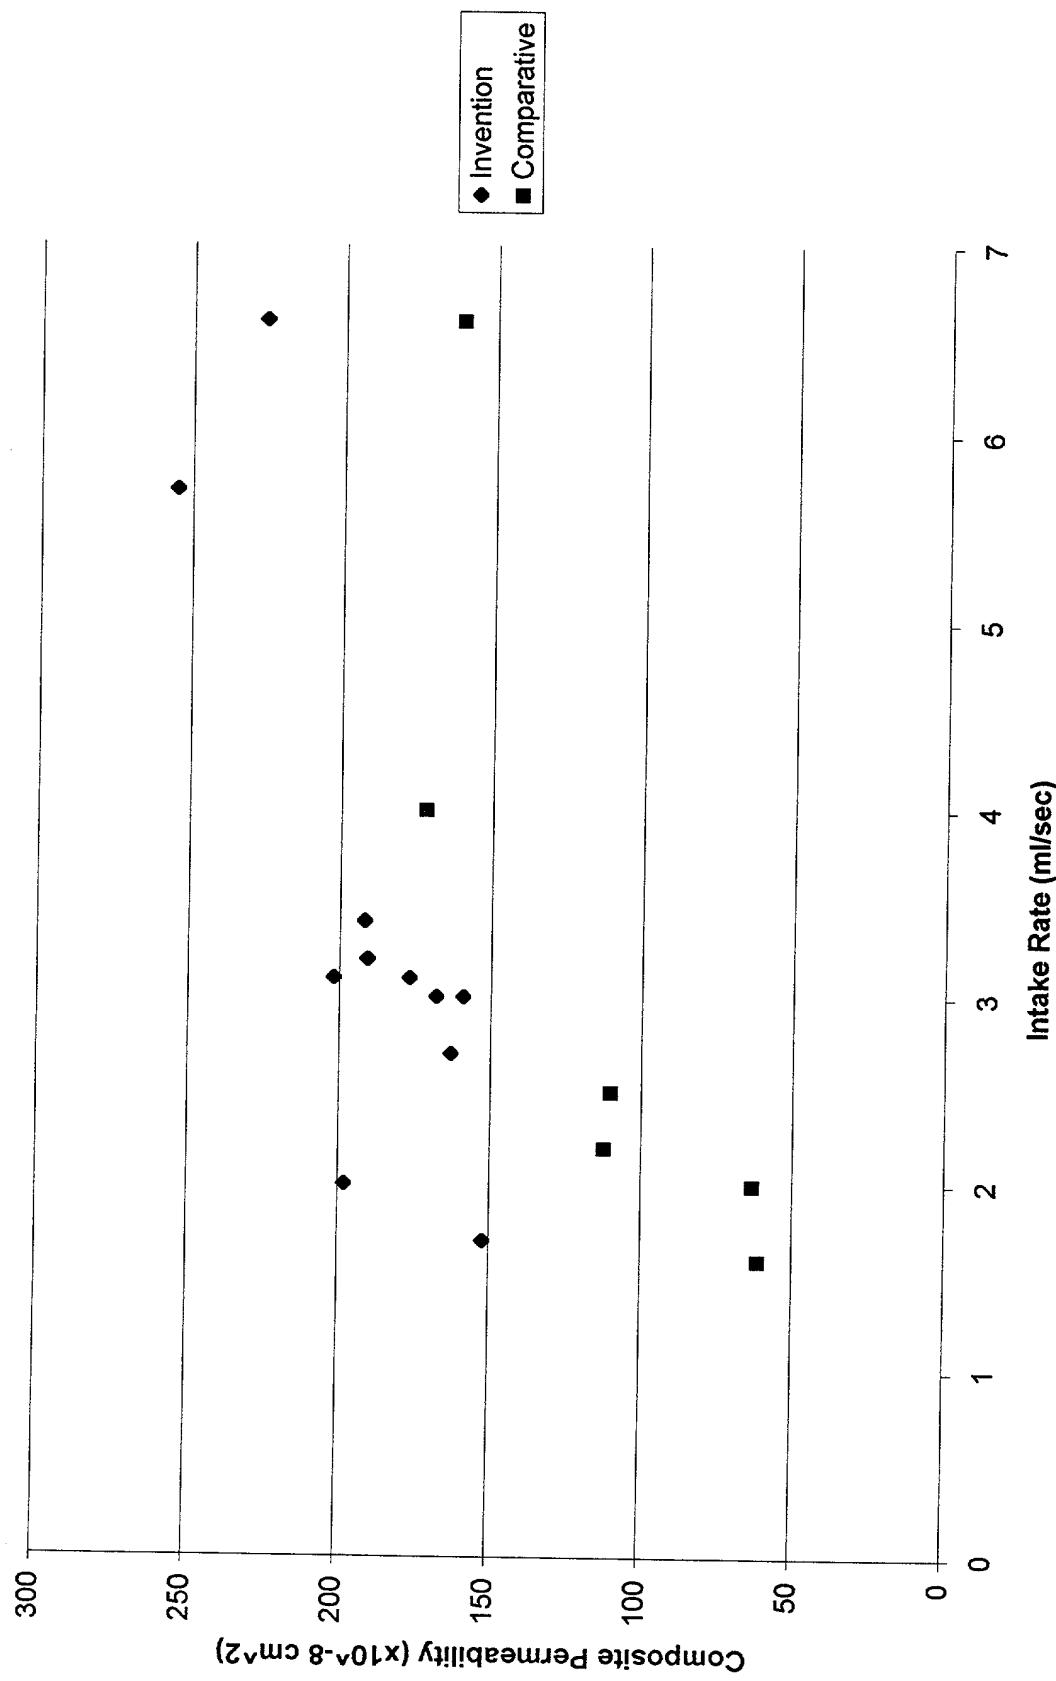


FIGURE 8